

Panasonic®

Air conditioner

Installation Instruction

ACXF60-46970

CAUTION

R32

REFRIGERANT

This Air Conditioner contains and operates with refrigerant R32.

THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL.

Refer to National, State, Territory and local legislation, regulations, codes, installation & operation manuals, before the installation, maintenance and/or service of this product.

MODEL NO. :-
CS/CU-NZ25, NZ35, NZ50YKE Series.

Required tools for Installation Works

- 1 Phillips screw driver

2 Level gauge

3 Electric drill, hole core drill (ø70 mm)

4 Hexagonal wrench (4 mm)

5 Spanner

6 Pipe cutter

7 Reamer

8 Knife

9 Gas leak detector

10 Measuring tape

11 Thermometer
- 12 Megameter

13 Multimeter

14 Torque wrench

15 18 N•m (1.8 kgf•m)

16 42 N•m (4.3 kgf•m)

17 55 N•m (5.6 kgf•m)

18 65 N•m (6.6 kgf•m)

19 100 N•m (10.2 kgf•m)

20 Vacuum pump

21 Gauge manifold

SAFETY PRECAUTIONS

- Read the following "SAFETY PRECAUTIONS" carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
- The caution items stated here must be followed because these are important contents of the operation manuals. The seriousness is classified by the following indications.

	WARNING	This indication shows the possibility of causing death or serious injury.
	CAUTION	This indication shows the possibility of causing injury or damage to properties only.

The items to be followed are classified by the symbols:

	Symbol with white background denotes item that is PROHIBITED.
	Symbol with dark background denotes item that must be carried out.

- Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

WARNING

1 Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unfit method or using incompatible material may cause product damage, burst and serious injury.

2 Do not install outdoor unit near handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to outdoor unit and cross over the handrail causing an accident.

3 Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.

4 Do not tie up the power supply cord into a bundle by hand. Abnormal temperature rise on power supply cord may happen.

5 Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.

6 Do not sit or step on the unit, you may fall down accidentally.

7 Keep plastic bag (packaging material) away from small children. It may cling to nose and mouth and prevent breathing.

8 When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, eg. air etc mix into refrigeration cycle (piping). Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.

9 Do not pierce or turn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.

10 Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.

11 For R32/R410A model, use piping, flare nut and tools which is specified for R32/R410A refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury.

12 For R32 and R410A, the same flare nut are put on the outdoor unit side and pipe can be used.

13 Since the working pressure for R32/R410A is higher than that of refrigerant R22 model, replacing conventional piping and flare nuts on the outdoor unit side are recommended.

14 If reuse piping is unavoidable, refer to instruction "IN CASE OF REUSING EXISTING REFRIGERANT PIPING"

15 Thickness for copper pipes used with R32/R410A must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm.

16 It is desirable that the amount of residual oil less than 40 mg/10 m.

17 Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.

18 For refrigeration system work, install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.

19 Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fail, water leakage, fire or electrical shock.

20 Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.

21 For electrical work, follow the national regulation, legislation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.

22 Do not use joint cable for indoor / outdoor connection cable. Use the specified indoor/outdoor connection cable, refer to instruction ③ **CONNECT THE CABLE TO THE INDOOR UNIT** and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.

23 Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.

24 This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD), with sensitivity of 30 mA at 0.1 sec or less. Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.

25 During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at opened position will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.

26 During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.

27 Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.

28 After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.

29 Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.

30 Be aware that refrigerants may not contain an odor.

31 This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.

CAUTION

1 Do not install the unit in a place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.

2 Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.

3 Do not release refrigerant during piping work for installation, re-installation and during repairing refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.

4 Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.

5 Do not touch the sharp aluminum fin, sharp parts may cause injury.

6 Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.

7 Select an installation location which is easy for maintenance. Incorrect installation, service or repair of this air conditioner may increase the risk of rupture and this may result in loss damage or injury and/or property.

8 Power supply connection to the room air conditioner. Use power supply cord 3 x 1.5 mm² (1.0 ~ 1.5HP), 3 x 2.5 mm² (2.0HP) type designation 6024S IEC 57 or heavier cord. Connect the power supply cord of the air conditioner to the mains using one of the following method.

9 Power supply point should be in easily accessible place for power disconnection in case of emergency. In some countries, permanent connection of this air conditioner to the power supply is prohibited.

10 1) Power supply connection to the receptacle using power plug.
Use an approved 15/16 A (1.0 ~ 1.5HP), 16 A (2.0HP), power plug with earth pin for the connection to the socket.
2) Power supply connection to a circuit breaker for the permanent connection.
Use an approved 16 A (1.0 ~ 2.0HP), circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.0 mm contact gap.

11 Installation work.
It may need two people to carry out the installation work.

12 Keep any required ventilation openings clear of obstruction.

PRECAUTION FOR USING R32 REFRIGERANT

- Pay careful attention to the following precaution points and the installation work procedures.

WARNING

1 When connecting flare at indoor side, make sure that the flare connection is used only once, if torqued up and released, the flare must be remade. Once the flare connection was torqued up correctly and leak test was made, thoroughly clean and dry the surface to remove oil, dirt and grease by following instructions of silicone sealant. Apply neutral cure (alkoxy type) & ammonia-free silicone sealant that is non-corrosive to copper & brass to the external of the flared connection to prevent the ingress of moisture on both the gas & liquid sides. (Moisture may cause freezing and premature failure of the connection)

2 The appliance shall be stored, installed and operated in a well ventilated room with indoor floor area larger than A_{min} (m²) (Refer Table A) and without any continuously operating ignition source. Keep away from open flames, any operating gas appliances or any operating electric heater. Else, it may explode and cause injury or death.

3 The mixing of different refrigerants within a system is prohibited. Models that use R32 and R410A have a different charging port thread diameter to prevent erroneous charging with refrigerant R22 and for safety. Therefore, check beforehand. (The charging port thread diameter for R32 and R410A is 12.7 mm (1/2 inch).)

4 Ensure that foreign matter (oil, water, etc.) does not enter the piping. Also, when storing the piping, securely seal the opening by pinching, taping, etc. (Handling of R32 is similar to R410A.)

5 Operation, maintenance, repairing and refrigerant recovery should be carried out by trained and certified personnel in the use of flammable refrigerants and as recommended by the manufacturer. Any personnel conducting an operation, servicing or maintenance on a system or associated parts of the equipment should be trained and certified.

6 Any part of refrigerating circuit (evaporators, air coolers, AHU, condensers or liquid receivers) or piping should not be located in the proximity of heat sources, open flames, operating gas appliance or an operating electric heater.

7 The user/owner or their authorized representative shall regularly check the alarms, mechanical ventilation and detectors, at least once a year, when as required by national regulations, to ensure their correct functioning.

8 A logbook shall be maintained. The results of these checks shall be recorded in the logbook.

9 In case of ventilations in occupied spaces shall be checked to confirm no obstruction.

10 Before a new refrigerating system is put into service, the person responsible for placing the system in operation should ensure that trained and certified operating personnel are instructed on the basis of the instruction manual about the construction, supervision, operation and maintenance of the refrigerating system, as well as the safety measures to be observed, and the properties and handling of the refrigerant used.

11 The general requirement of trained and certified personnel are indicated as below:
a) Knowledge of legislation, regulations and standards relating to flammable refrigerants; and,
b) Detailed knowledge of and skills in handling flammable refrigerants, personal protective equipment, refrigerant leakage prevention, handling of cylinders, charging, leak detection, recovery and disposal; and,
c) Able to understand and to apply in practice the requirements in the national legislation, regulations and Standards; and,
d) Continuously undergo regular and further training to maintain this expertise.

12 Air-conditioner piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service.

CAUTION

1 Precautions shall be taken to avoid excessive vibration or pulsation to refrigerating piping.

2 Ensure protection devices, refrigerating piping and fittings are well protected against adverse environmental effects (such as the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris).

3 Expansion and contraction of long runs piping in refrigerating systems shall be designed and installed securely (mounted and guarded) to minimize the likelihood hydraulic shock damaging the system.

4 Protect the refrigerating system from accidental rupture due to moving furniture or reconstruction activities.

5 To ensure no leaking, field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure (>1.04 MPa, max 4.15 MPa). No leak shall be detected.

CAUTION

1 General

- Must ensure the installation of pipe-work shall be kept to a minimum. Avoid use dented pipe and do not allow acute bending.
- Must ensure that pipe-work shall be protected from physical damage.
- Must comply with national gas regulations, state municipal rules and legislation. Notify relevant authorities in accordance with all applicable regulations.
- Must ensure mechanical connections be accessible for maintenance purposes.
- In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.
- When disposal of the product, do follow to the precautions in #11 and comply with national regulations.
- In case of field charge, the effect on refrigerant charge caused by the different pipe length has to be quantified, measured and labelled.
- Always contact to local municipal offices for proper handling.
- Ensure the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed.
- Ensure refrigerant charge not to leak.
- Wear appropriate protective equipment, including respiratory protection, as conditions warrant.
- Keep all sources of ignition and hot metal surfaces away.

2 Servicing

- 2-1. Qualification of workers
 - Any qualified person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
 - Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
 - Servicing shall be performed only as recommended by the manufacturer.
 - The system is inspected, regularly supervised and maintained by a trained and certified service personnel who is employed by the person user or party responsible.
- 2-2. Checks to the area
 - Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised. For repair to the refrigerating system, the precautions in #2-3 to #2-7 must be followed before conducting work on the system.
- 2-3. Work procedure
 - Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.
- 2-4. General work area
 - All maintenance staff and others working in the local area shall be instructed and supervised on the nature of work being carried out.
 - Avoid working in confined spaces. Always ensure away from source, at least 2 meter of safety distance, or zoning of free space area of at least 2 meter in radius.
- 2-5. Checking for presence of refrigerant
 - The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.
 - Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non sparking, adequately sealed or intrinsically safe.
 - In case of leakage/spillage happened, immediately ventilate area and stay upwind and away from spill/release.
 - In case of leakage/spillage happened, do notify persons down wind of the leaking/spill, isolate immediate hazard area and keep unauthorized personnel out.
- 2-6. Presence of fire extinguisher
 - If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available at hand.
 - A degree of ventilation shall continue during the period that the work is carried out.
 - The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- 2-7. No ignition sources
 - No person carrying out work in relation to a refrigerating system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. He/She must not be smoking when carrying out such work.
 - All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space.
 - Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
 - No "No Smoking" signs shall be displayed.
- 2-8. Ventilated area
 - Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.
 - A degree of ventilation shall continue during the period that the work is carried out.
 - The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- 2-9. Checks to the refrigerating equipment
 - Where electrical components are being changed, they shall be fit for the purpose and to the correct specification.
 - All times the manufacturer's maintenance and service guidelines shall be followed.
 - If in doubt consult the manufacturer's technical department for assistance.
 - The following checks shall be applied to installations using flammable refrigerants.
 - The actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed.
 - The ventilation machinery and outlets are operating adequately and are not obstructed.
 - If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
 - Marking to the equipment and legible. Markings and signs that are illegible shall be corrected.
 - Refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are properly protected against such corrosion.
- 2-10. Checks to electrical devices
 - Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
 - Initial safety checks shall include but not limit to:-
 - That capacitors are discharged; this shall be done in a safe manner to avoid possibility of sparking.
 - That there is no live electrical components and wiring are exposed while charging, recharging or purging the system.
 - That there is continuity of earth bonding.
 - All times the manufacturer's maintenance and service guidelines shall be followed.
 - If in doubt consult the manufacturer's technical department for assistance.
 - If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.
 - If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.
 - The owner of the equipment must be informed or reported so all parties are advised thereafter.
- 3 Repairs to sealed components
 - During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.
 - If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
 - Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- 4 Repair to intrinsically safe components
 - Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
 - Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.
 - The test apparatus shall be at the correct rating.
 - Replace components only with parts specified by the manufacturer. Unspecified parts by manufacturer may result ignition of refrigerant in the atmosphere from a leak.
- 5 Cabling
 - Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.
 - The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.
- 6 Detection of flammable refrigerants
 - Under no circumstances shall potential sources of ignition be used in the searching or detection of refrigerant leaks.
 - A halide torch (or any other detector using a naked flame) shall not be used.
 - The following leak detection methods are deemed acceptable for all refrigerating systems.
 - No leaks shall be detected when using detection equipment with a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure (>1.04 MPa, max 4.15 MPa) for example, a universal sniffer.
 - Electronic leak detectors may be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration.
 - (Detection equipment shall be calibrated in a refrigerant-free area.)
 - Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
 - Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.
 - Leak detection fluids are also suitable for use with most refrigerants, for example, bubble method and fluorescent method agents. The use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
 - If a leak is suspected, all naked flames shall be removed/extinguished.
 - If a leakage of refrigerant is found, which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. The precautions in #7 must be followed to remove the refrigerant.
- 7. Removal and evacuation
 - When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used.
 - However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:
 - remove refrigerant -> purge the circuit with inert gas -> evacuate -> purge with inert gas -> open the circuit by cutting or brazing

CAUTION

1 The refrigerant charge shall be recovered into the correct recovery cylinders.

2 The system shall be purged with OFN to render the appliance safe. (remark: OFN = oxygen free nitrogen, type of inert gas)

3 This process may need to be repeated several times.

4 Compressed air or oxygen shall not be used for this task.

5 Purging shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.

6 This process shall be repeated until no refrigerant is within the system.

7 When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

8 This operation is absolutely vital if brazing operations on the pipe work are to take place.

9 Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and there is ventilation available.

CAUTION

1 8. Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed.
 - Ensure that contamination of different refrigerants does not occur when using charging equipment.
 - Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
 - Cylinders shall be kept in appropriate position according to the instructions.
 - Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
 - Label the system when charging is complete (if not already).
 - Extreme care shall be taken not to over fill the refrigerating system.
- Prior to recharging the system it shall be pressure tested with OFN (refer to #7).
- The system shall be pressure tested on completion of charging but prior to commissioning.
- A follow up leak test shall be carried out prior to leaving the site.
- Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant.
- To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.

9. Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant.
- It is essential that electrical power is available before the task is commenced.
 - a) Become familiar with the equipment and its operation.
 - b) Isolate system electrically.
 - c) Before attempting the procedure ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Electrostatic charge may accumulate and create a hazardous condition when charging or discharging the refrigerant.
- To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.

CAUTION

10 Labelling

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.
- The label shall be dated and signed.
- Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

11. Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge are available.
- Do not mix refrigerants in recovery units and especially not in cylinders.
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants.
- In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition.
- Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.
- Do not that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- The evacuation process shall be carried out prior to returning the compressor to the suppliers.
- Only electric heating to the compressor body shall be employed to accelerate this process.
- When oil is drained from a system, it shall be carried out safely.

Explanation of symbols displayed on the indoor unit or outdoor unit.

	WARNING	This symbol shows that this equipment uses a flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.
	CAUTION	This symbol shows that the Installation Manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.
	CAUTION	This symbol shows that there is information included in the Operation Manual and/or Installation Manual.

Attached accessories

No.	Accessories part	Qty.	No.	Accessories part	Qty.
1	Installation plate	1	4	Battery	2
2	Installation plate fixing screw	5	5	Remote control holder	1
3	Remote Control	1	6	Remote control holder fixing screw	2

Piping size		
Gas	Liquid	
CZ-3F5, 7BP	9.52 mm (3/8")	6.35 mm (1/4")
CZ-4F5, 7, 10BP	12.7 mm (1/2")	6.35 mm (1/4")
CZ-5F5, 7, 10BP	15.88 mm (5/8")	6.35 mm (1/4")

SELECT THE BEST LOCATION

INDOOR UNIT

1 Do not install the unit in excessive oil fume area such as kitchen, workshop and etc.

2 There should not be any heat source or steam near the unit.

3 There should not be any obstacles blocking the air circulation.

4 A place where air circulation in the room is good.

5 A place where drainage can be easily done.

6 A place where noise prevention is taken into consideration.

7 Do not install the unit near the door way.

8 Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.

9 Recommended installation height for indoor unit is at 1.8 m or more from the floor.

OUTDOOR UNIT

1 If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed.

2 There should not be any animal or plant which could be affected by hot air discharged.

3 Keep the spaces indicated by arrows from wall, ceiling, fence or other obstacles.

4 Do not place any obstacles which may cause a short circuit of the discharged air.

5 If piping length is over the (piping length for additional gas), additional refrigerant should be added as shown in the table.

Table A

Model	Capacity W (HP)	Piping size		Std. Length (m)	Max. Elevation (m)	Min. Piping Length (m)	Max. Piping Length (m)	Additional Refrigerant (g/m)	Piping Length for add. gas (m)	Max. Refrigerant Charge (kg)	Indoor A _{min} (m²)
		Gas	Liquid								
NZ25***	1.0HP	9.52 mm (3/8")	6.35 mm (1/4")	5	10	3	20	10	7.5	0.95	Not applicable (*)
NZ35***	1.5HP	12.70 mm (1/2")	6.35 mm (1/4")	5	10	3	20	10	7.5	0.95	Not applicable (*)
NZ50***	2.0HP	12.70 mm (1/2")	6.35 mm (1/4")	5	15	3	20	15	7.5	1.32	Not applicable (*)

(*) Systems with total refrigerant charge, m_{tc}, lower than 1.84 kg are not subjected to any room area requirements.

Example: For NZ25***

If the unit is installed at 10 m distance, the quantity of additional refrigerant should be 25 g (10-7.5) m x 10 g/m = 25 g.

$$A_{min} = (m_{tc} / (2.5 \times (LFL)^{0.66} \times h_o)) ^2$$
 ** not less than safety factor margin

A_{min} = Required minimum room area, in m²
m_{tc} = Refrigerant charge in appliance, in kg
LFL = Lower flammability limit (0.307 kg/m³)
h_o = Installation height of the appliance (1.8 m for wall mounted)
SF = Safety factor with a value of 0.75

** The required minimum room area, A_{min}, shall also be governed by the safety factor margin formula below :

$$A_{min} = m_{tc} / (SF \times LFL \times h_o)$$

The higher value shall be taken when determining the room area.

Indoor/Outdoor Unit Installation Diagram

Piping direction

Right

Right Rear

Right bottom

Left

Attention not to bend up drain hose

50 mm or more

Installation plate ①

Bushing-Sleeve (X)

Sleeve (X)

Putty (X)
(Gum Type Sealer)

Bend the pipe as closely on the wall as possible, but be careful that it doesn't break.

In case of indoor power supply

Power supply cord (X)

Flare connection

Vinyl tape (wide) (X)

Apply after carrying out a drainage test.

Carry out the drainage test, remove the air filters and pour water into the heat exchanger.

Saddle (X)

In case of outdoor power supply

Power supply cord (X)

Connection cable

Liquid side piping (X)

Gas side piping (X)

Additional drain hose (X)

Insulation of piping connections

1 Carry out insulation after checking for gas leaks and secure with vinyl tape.

2 Vinyl tape

Attaching the remote control holder to the wall

Remote control ②

Remote control holder ⑤

It is advisable to avoid more than 2 blockage directions. For better ventilation & multiple-outdoor installation, please consult authorized dealer/specialist.

• This illustration is for explanation purposes only. The indoor unit will actually face a different way.

(*) If holder at the rear of chassis (Refer column "4 Indoor Unit Installation") need to be used to prop up the unit, this distance shall be 65 mm or more.

ENGLISH

ACXF60-46970

PRINTED IN MALAYSIA

1/2

1 SELECT THE BEST LOCATION


(Refer to "Select the best location" section)

INOMHUSENHET

1 VÄLJ DEN BÄSTA PLATSEN

(Se kapitel "Välj den bästa platsen")

2 FASTSÄTTNING AV INSTALLATIONSPLATTAN

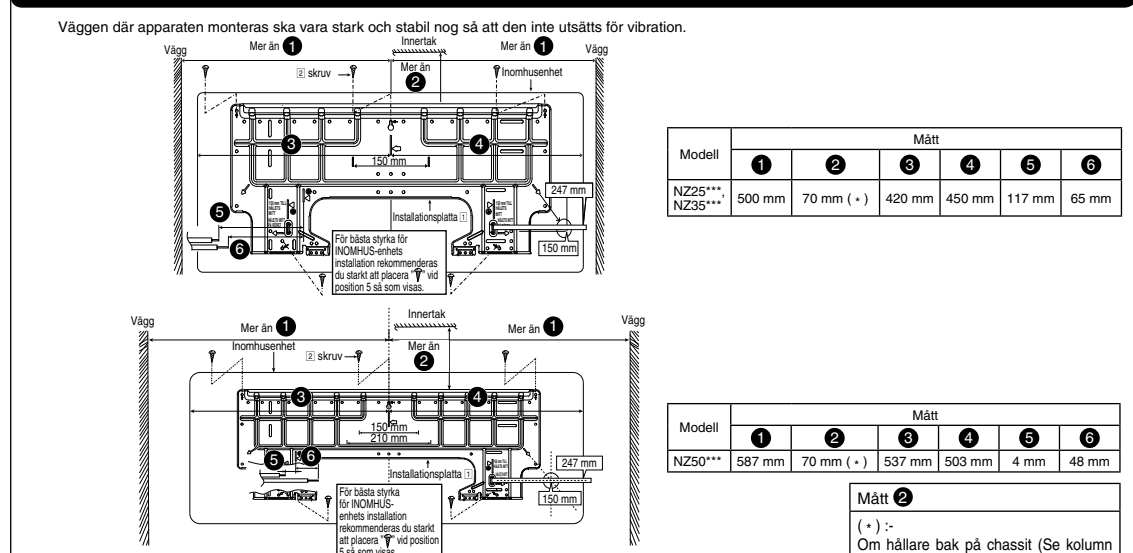

Installationsplåt mitt ska vara min. ① från väggens höger eller vänstra kant. Avståndet mellan installationsplåten ände och taket ska vara minst ②. Från installationsplåtens mitt till enhetens vänstra sida är ③. Från installationsplåtens mitt till enhetens högra sida är ④. ⑤ Vid rödrågning från vänster ska rörslutningen på vätskesidan placeras ca. ⑥ från denna linje. ⑥ Vid rödrågning från vänster ska rörslutningen på gasensida placeras ca. ⑦ från denna linje.




- Placera monteringsplattan på väggen med minst fem skruvar. (minst 5 skruvar). (Använd förankringsbultar om apparaten ska fästas vid en betongvägg.)
- Fäst monteringsplattan horisontellt genom att räkta in markeringssnören med ett snöre och ett vattenpass.
- Använd en kärbormaskin för att borra ett $\varnothing 70$ mm hål för rörledningen.
- Ställ in i linje med monteringsplåtens högra och vänstra sida. Den förlängda linjens skärningspunkt sammanfaller med hålets mitt. En annan metod är att placera tejp för mätning i det läge som anges i diagrammet ovan. Hålets mitt erhålls genom att mäta avståndet på 150 mm för vänster resp. höger hål (NZ25***, NZ35*** eller 210 mm för vänster hål och 150 mm för höger hål (NZ50***).
- Borra hålet för röret antingen till höger eller till vänster. Hålet ska luta lätt mot utomhusvidan.

3 BORRA HÅL I VÄGGEN OCH MONTERA EN RÖRMUFF









5 ANSLUT ELKABELN TILL INOMHUSENHETEN

- Inom- och utomhusenhetsens anslutningskabel kan anslutas utan att frontgallret måste tas bort.
- Avgrö vilken typ av strömförsörjningsanslutning som ska användas, inomhusströmförsörjning eller utomhusströmförsörjning.

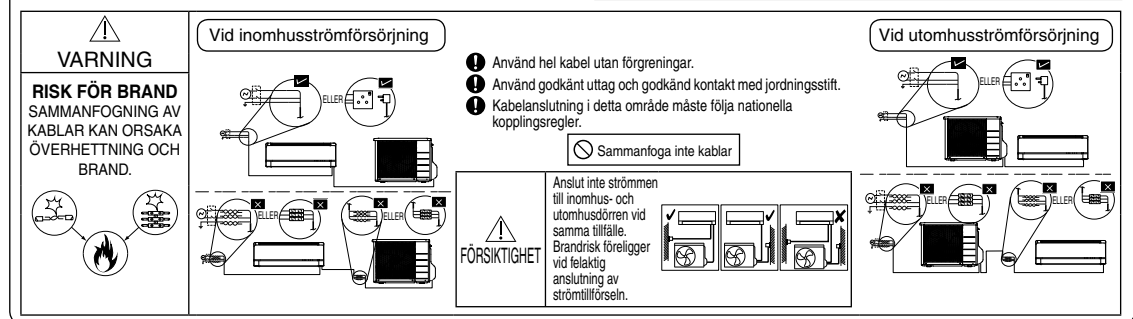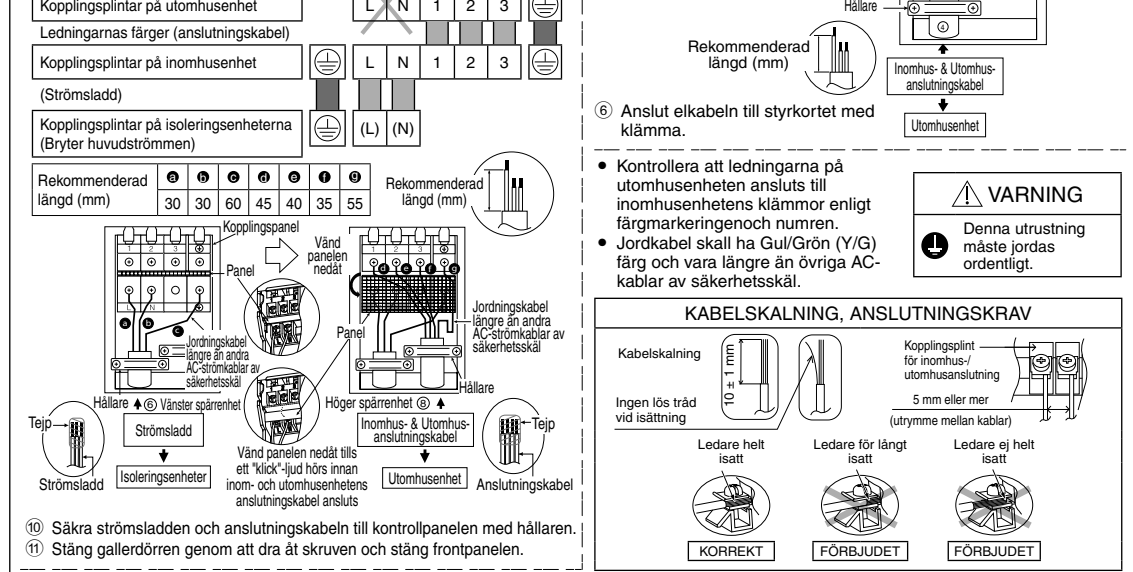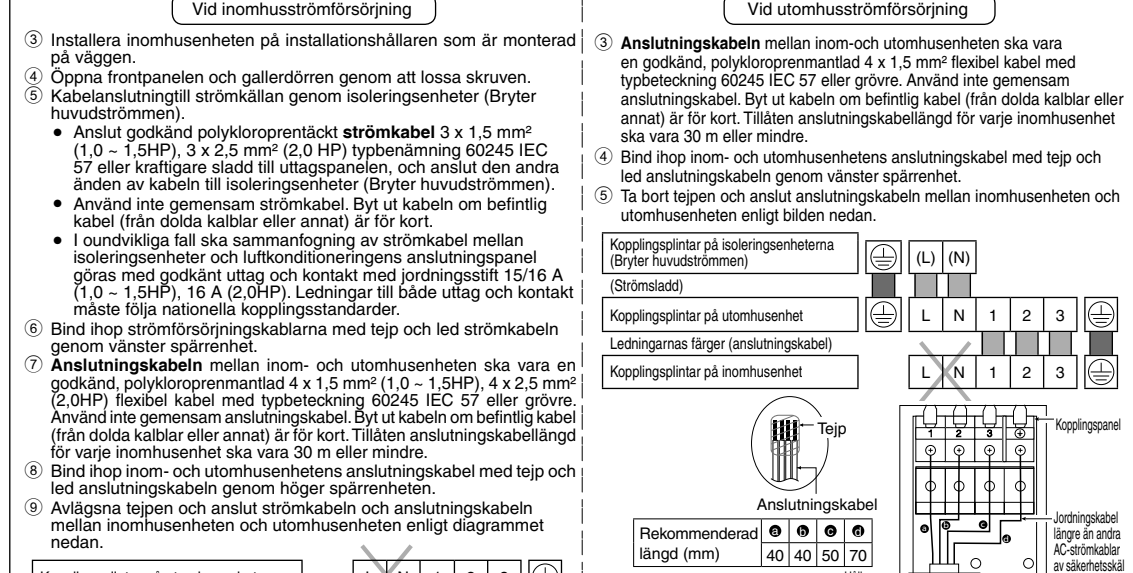

4 INSTALLATION AV INOMHUSENHET


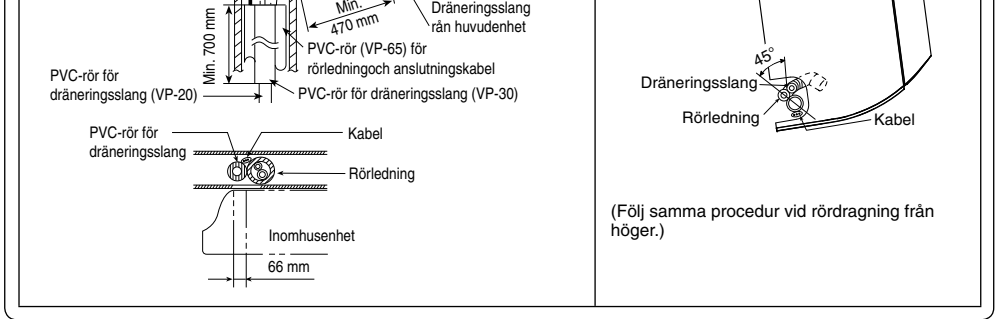
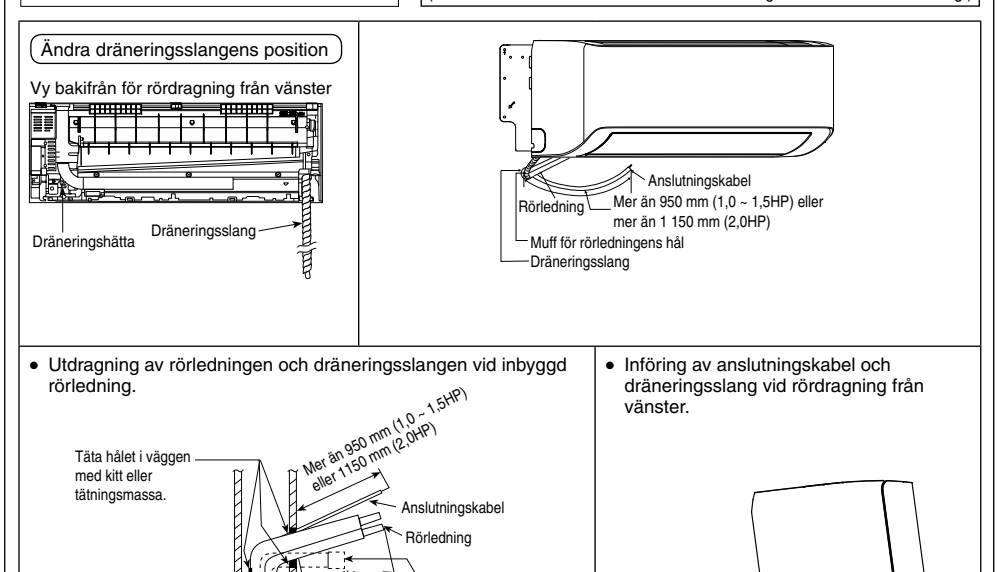
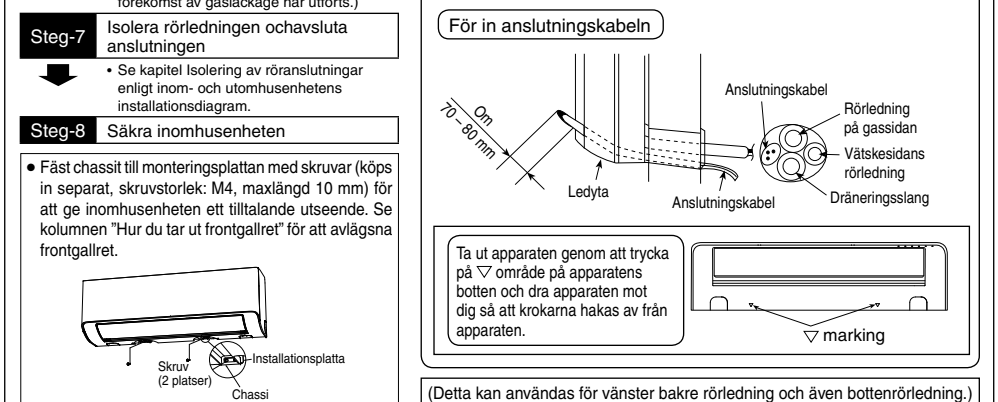
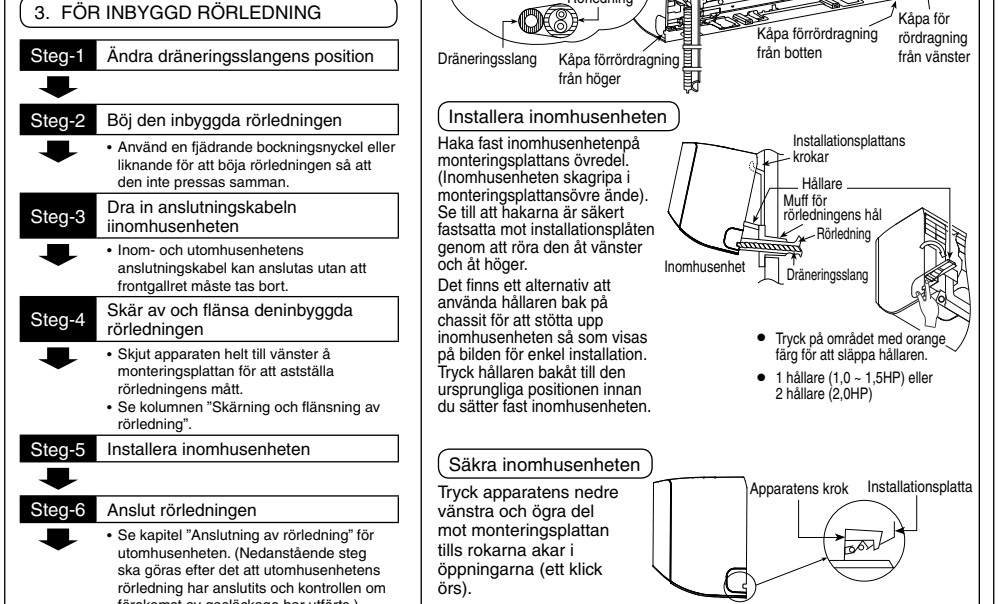
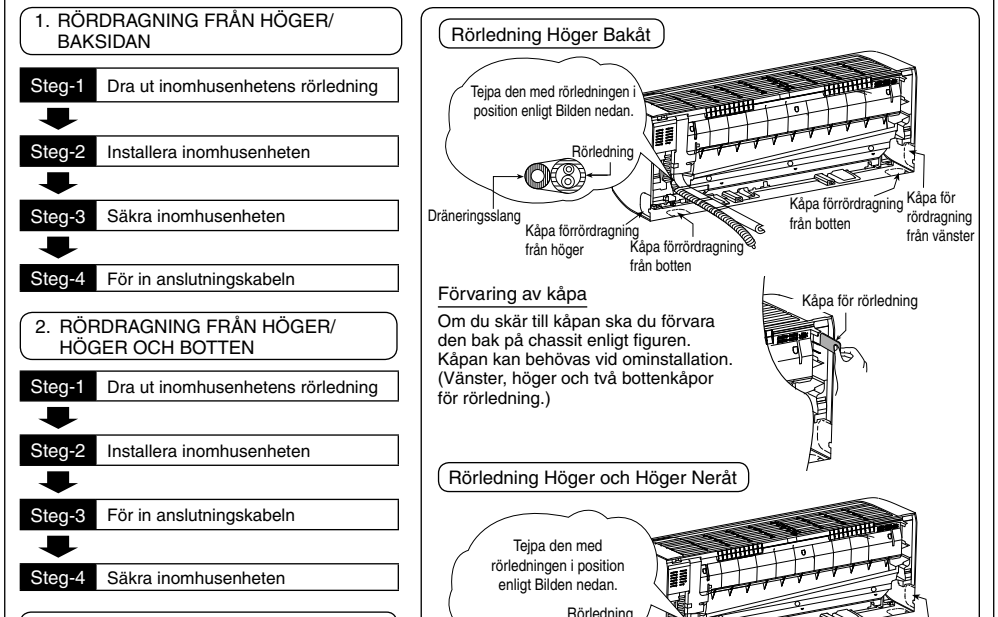
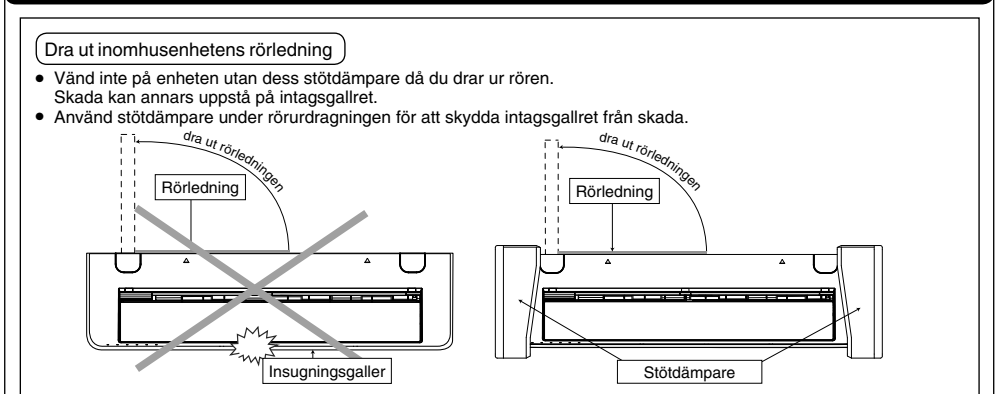


UTOMHUSENHET


1 VÄLJ DEN BÄSTA PLATSEN

(Se kapitel "Välj den bästa platsen")

2 INSTALLATION AV UTOMHUSENHETEN

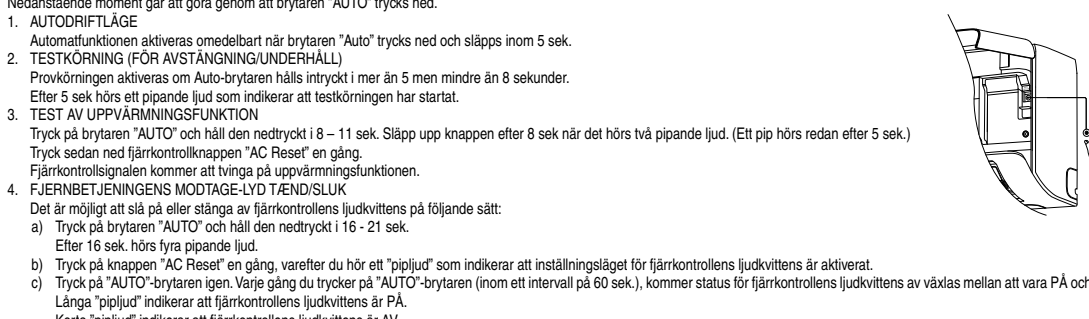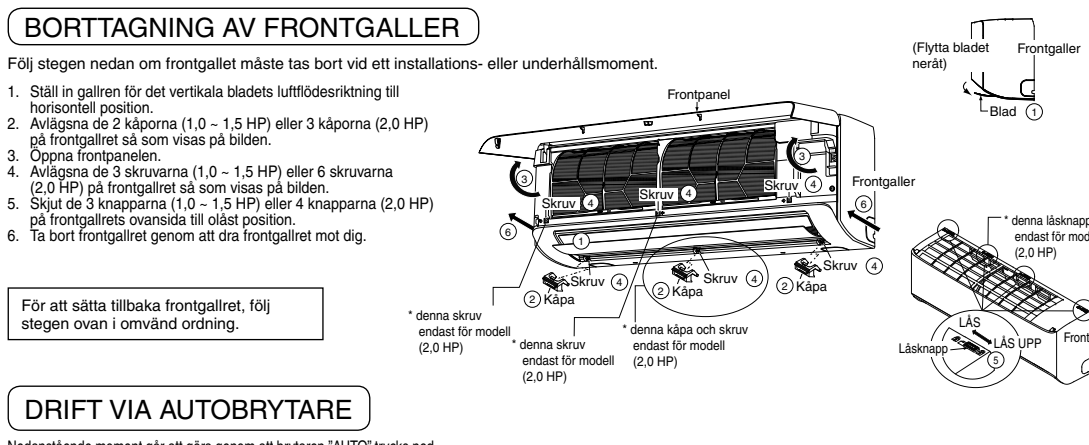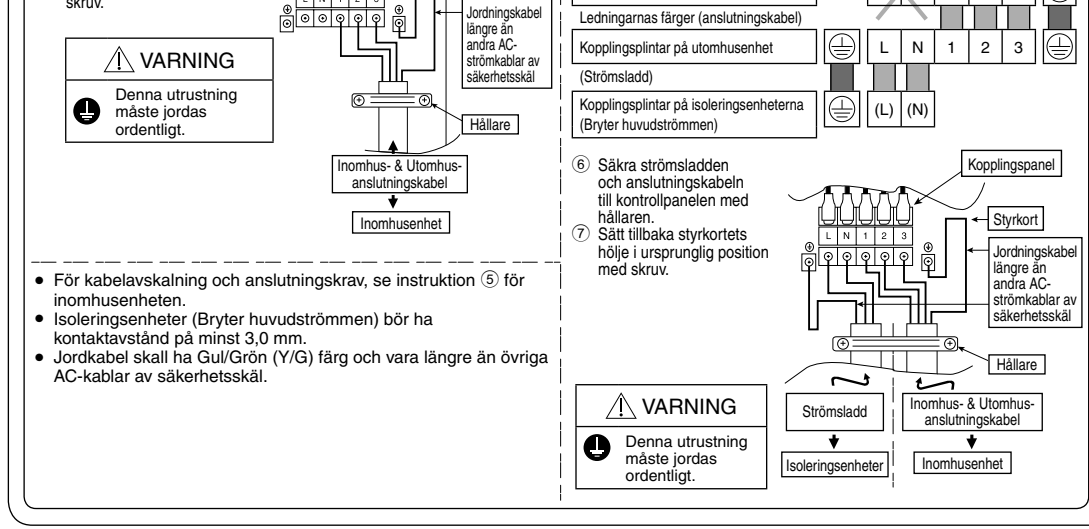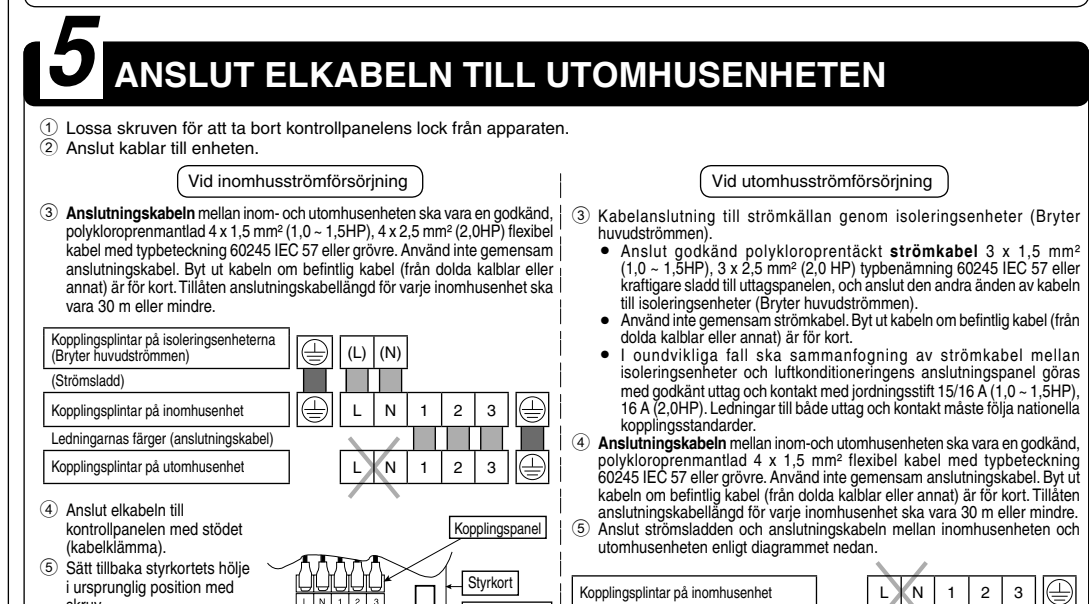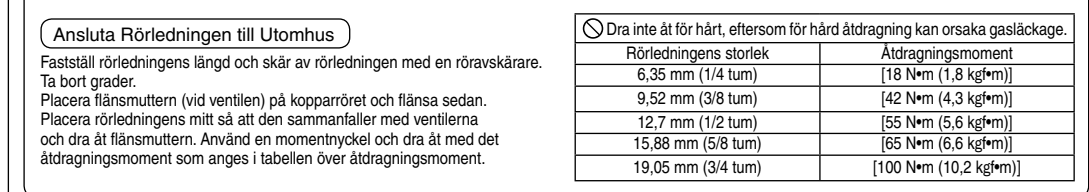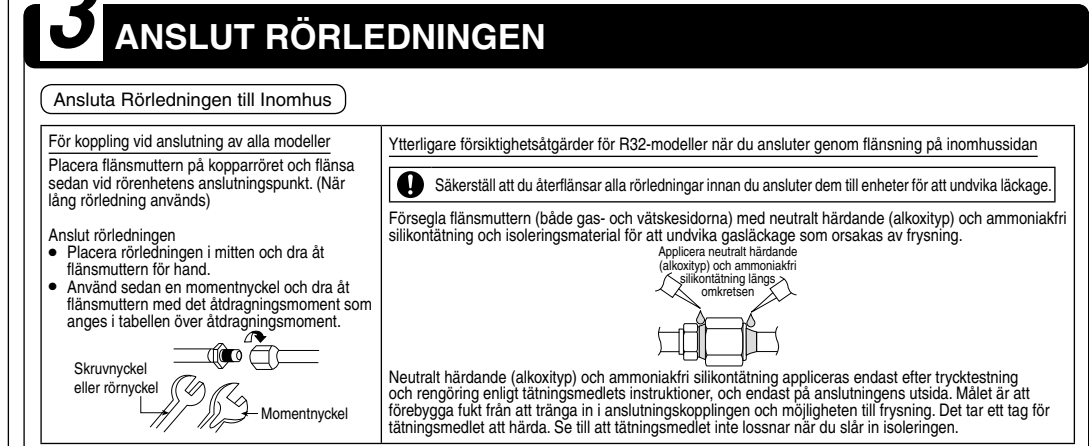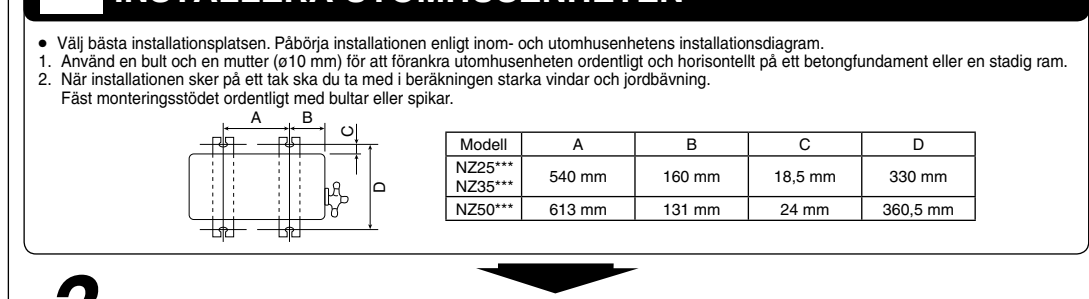

4 LUFTTRÄNGSELTEST FÖR KYLSKÅPSSYSTEMET

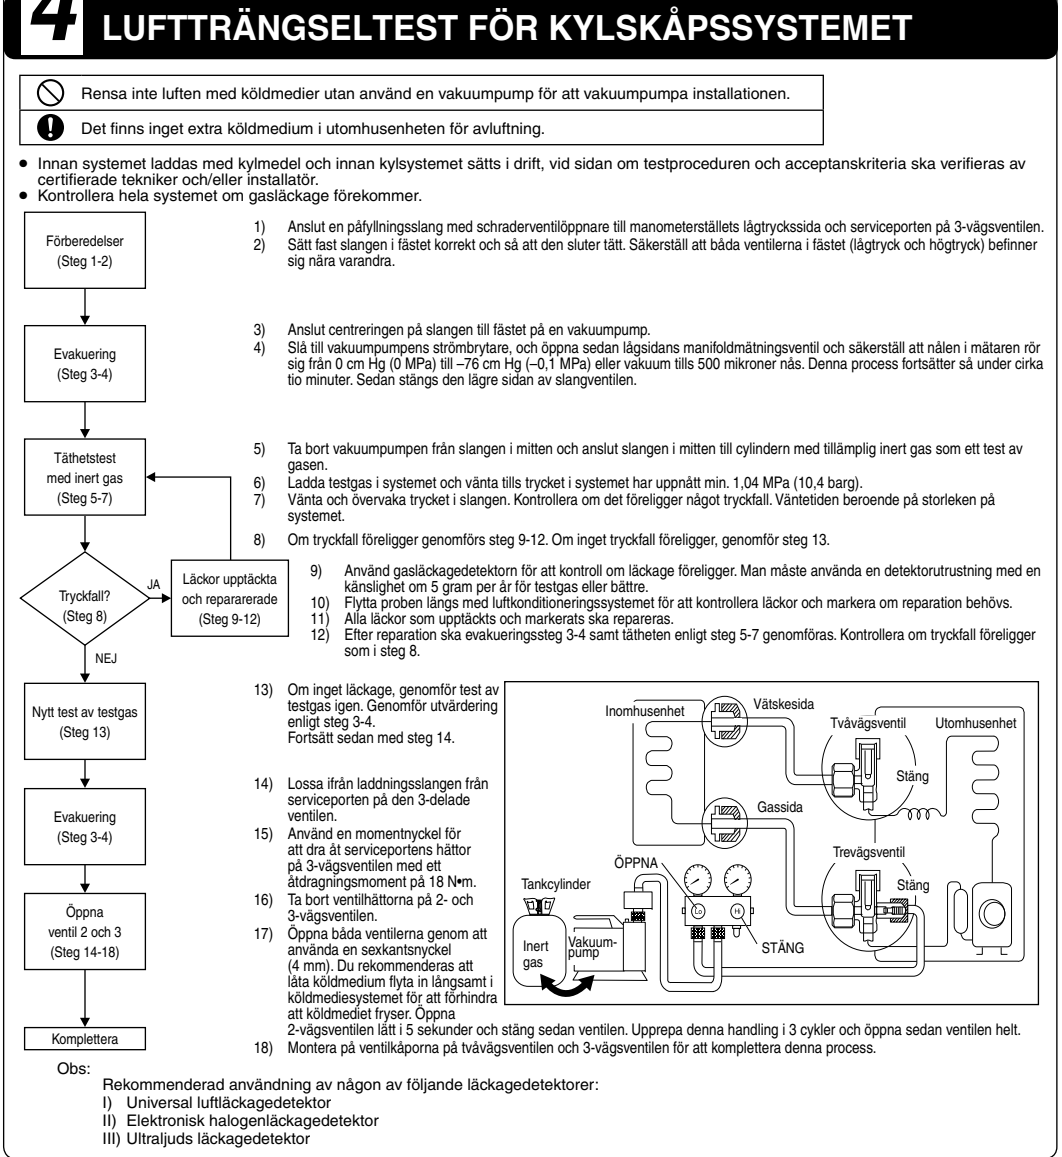


INNENDØRSENHET

1 VELG BESTE PLASSERING


(Les avsnittet "Velg beste plassering")

2 SLIK FESTES INSTALLASJONSPLATEN

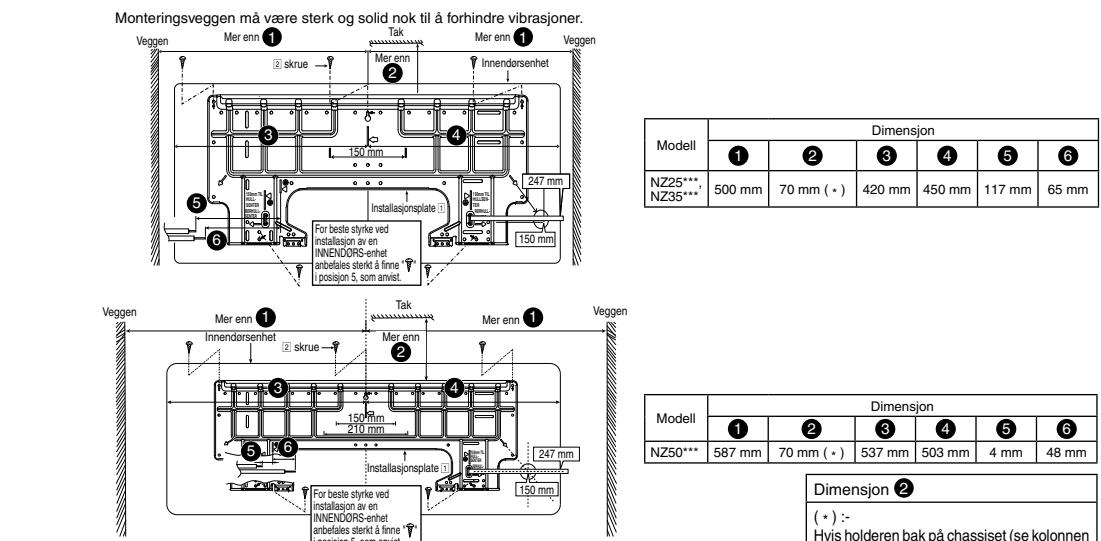



Senter på installasjonsplate bør være mer enn 1 mm til høyre og venstre på veggen. Avstanden fra kanten på installasjonsplaten til taket må være mer enn 2. Fra installasjonsplattens senter til enhetens venstre side er 3. Fra installasjonsplattens senter til enhetens høyre side er 4. For røropplegg til venstre bør rørtilkobling for gass være omtrent 5 fra dannelsen. Monter installasjonsplaten på veggen med 5 skruer eller mer (minst 5 skruer). (Ved montering av enhet på murvegg, bør du vurderer å bruke forankringsbolter.) Monter alltid installasjonsplaten horisontalt ved å justere markeringslinjen med tråden og bruke en nivåmåler. Drill hull i rørraplen med en 870 mm hullkjerne. Stå på linje med bruk av installasjonsplattens venstre og høyre side. Krysspunktet til den forlengede linjen er midt på hullet. Du kan også bruke målebånd og legge det i posisjonen vist på diagrammet ovenfor. Midten på hullet finner du ved å måle 150 mm fra henholdsvis venstre og høyre hull (NZ25***, NZ35***) eller 210 mm for venstre hull og 110 mm for høyre hull (NZ50***).

3 DRILL HULL I VEGGEN OG INSTALLER EN RØRMUFFE

















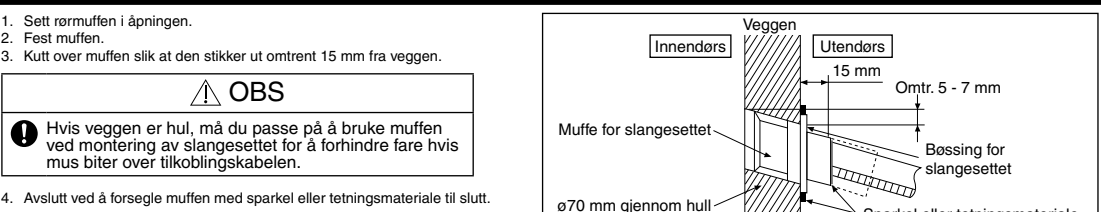


1. Sett rørmuffen i åpringen. 2. Fest muffen. 3. Kutt over muffen slik at den stikker ut omtrent 15 mm fra veggen. OBS: Hvis veggen er hul, må du passe på å bruke muffen ved montering av slangesettet for å forhindre fare hvis mus biter over tilkoblingskabelen. 4. Avslutt ved å forsegle muffen med sparkel eller tetningsmateriale til slutt.

5 TILKOBLING AV KABELN TIL INNENDØRSENHETEN

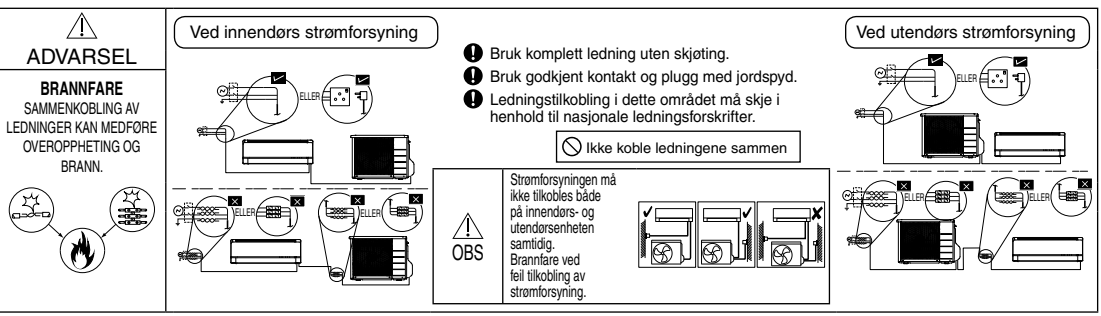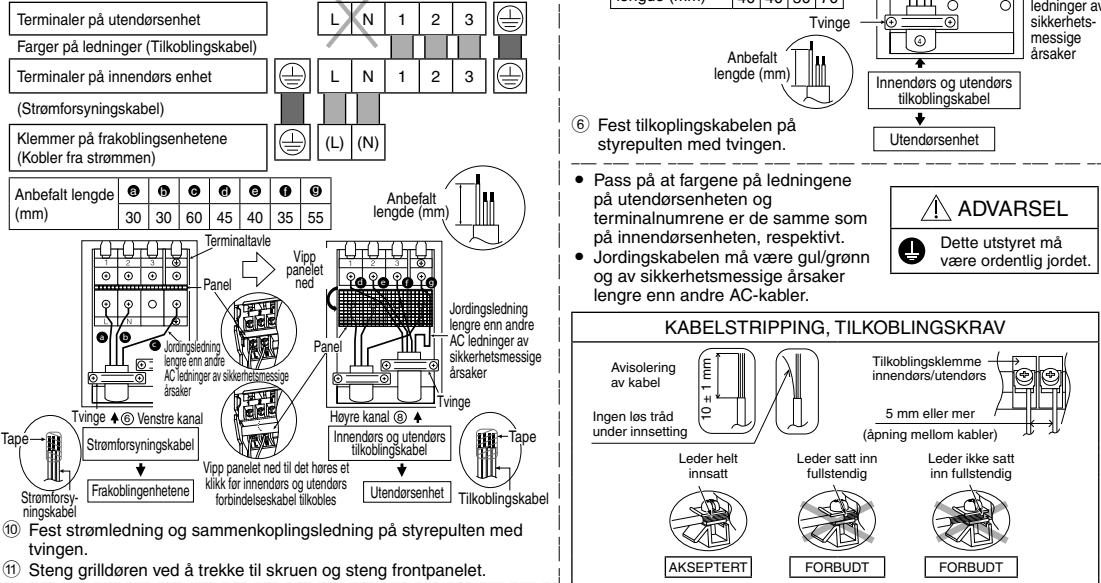

4 INSTALLASJON AV INNENDØRSENHET

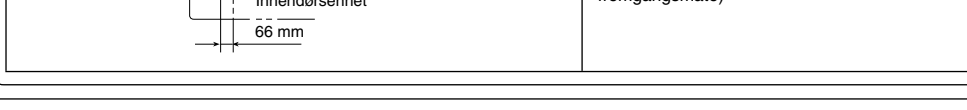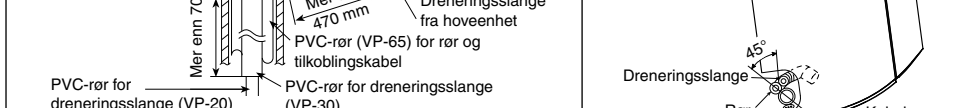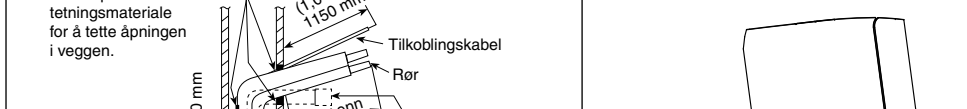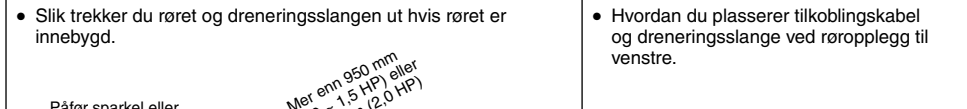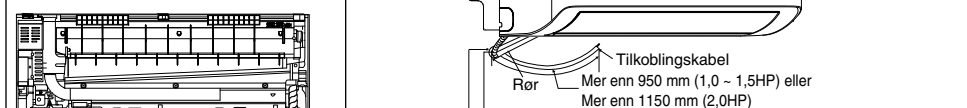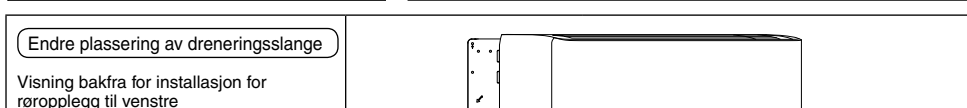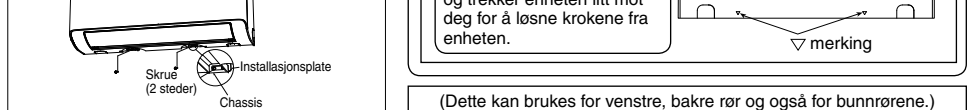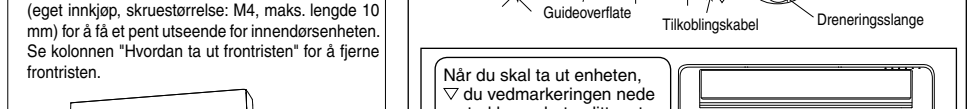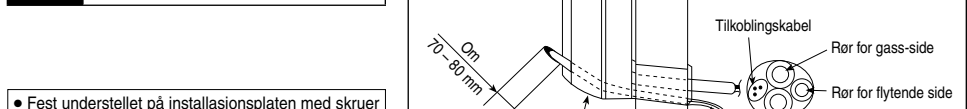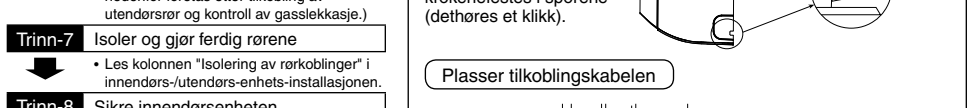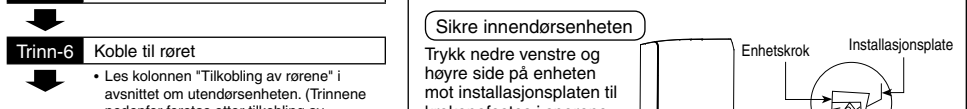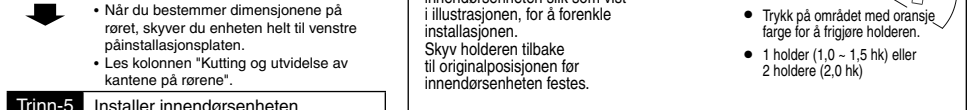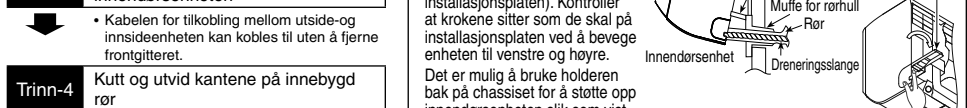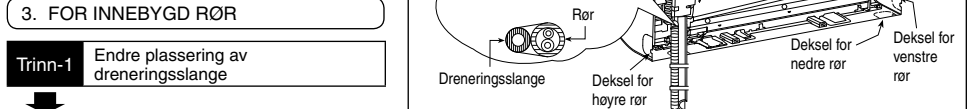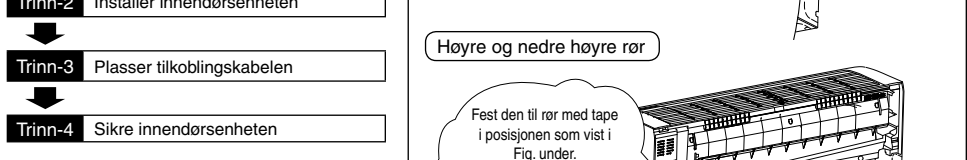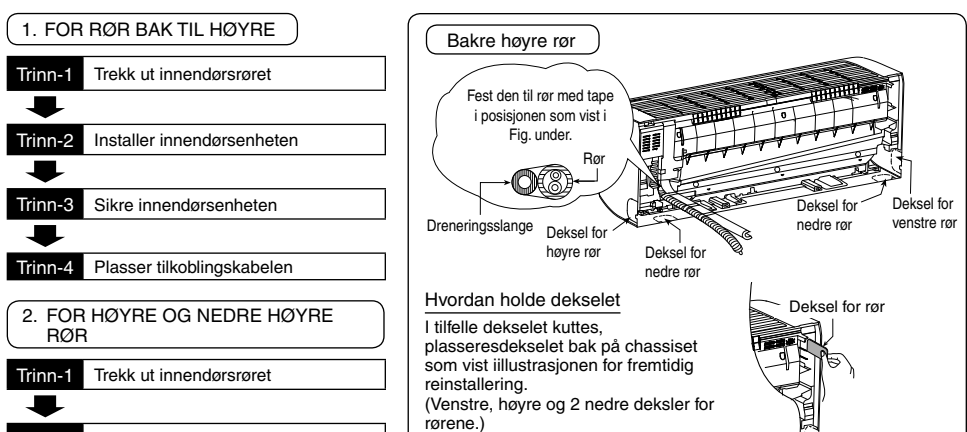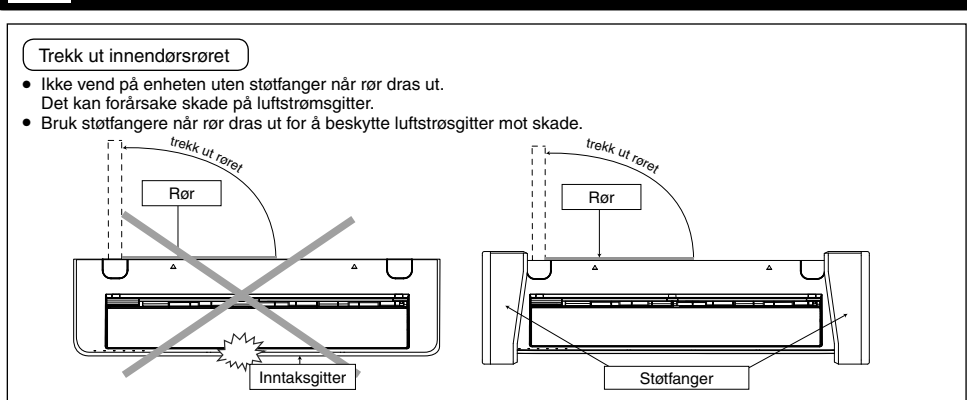


UTENDØRSENHET

1 VELG BESTE PLASSERING




















(Les avsnittet "Velg beste plassering")

2 INSTALLER UTENDØRSENHETEN

• Etter at passende plassering er valgt, start installering i henhold til installeringsdiagrammet for Innendørs/Utendørsenhet. 1. Fest enheten godt på betong eller en fast ramme horisontalt med bolt og mutter (Ø10 mm). 2. Hvis du installerer ved tak, må du ta hensyn til sterk vind og eventuelt jordskjelv. Fest installasjonen skikkelig med bolter eller spiker.

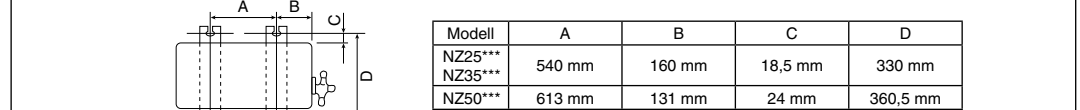

3 KOBLE TIL RØRET

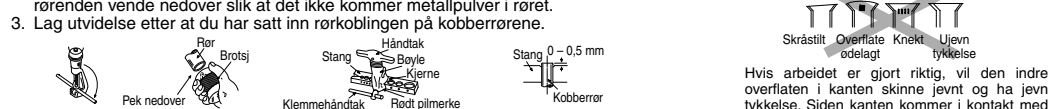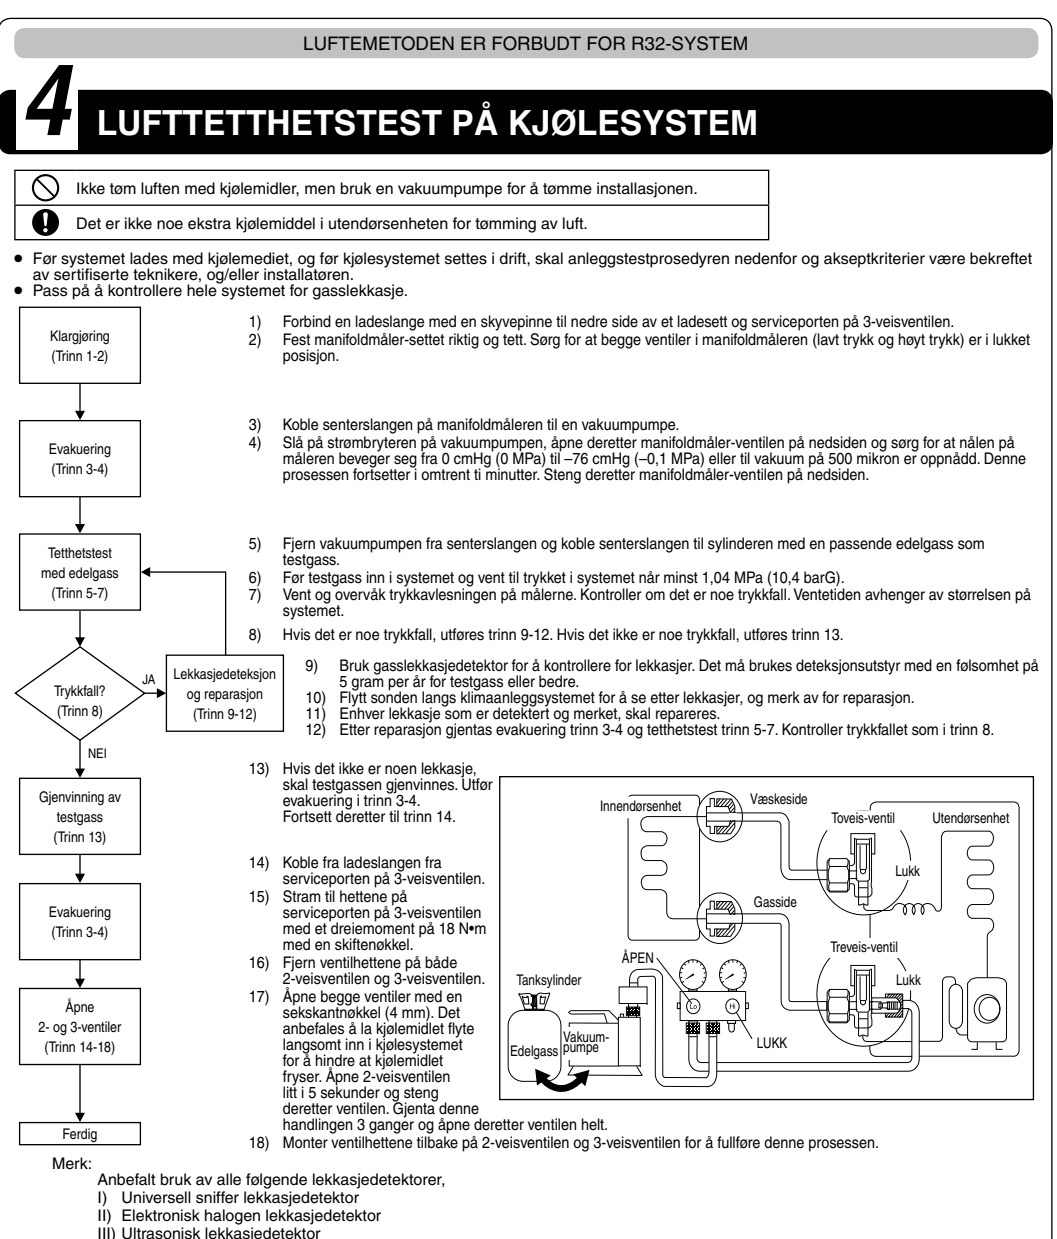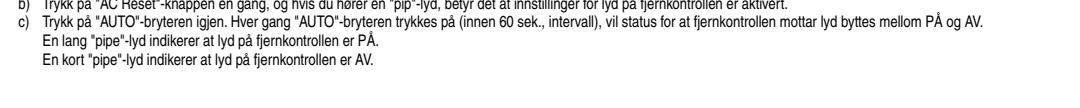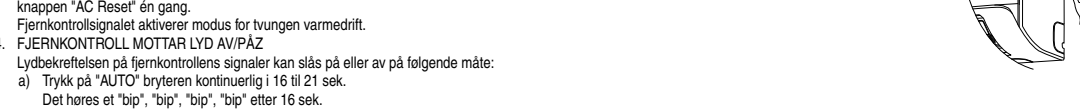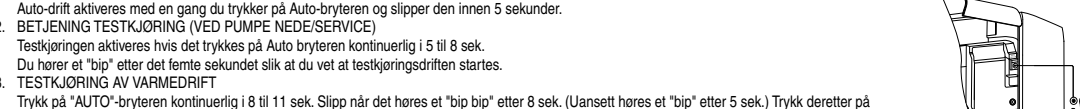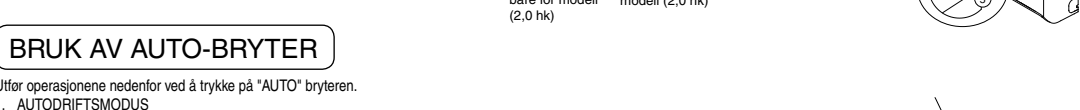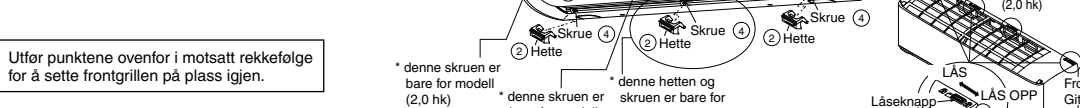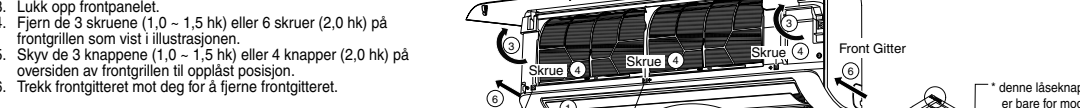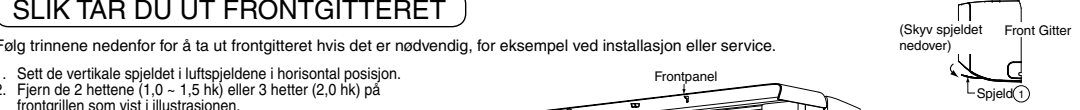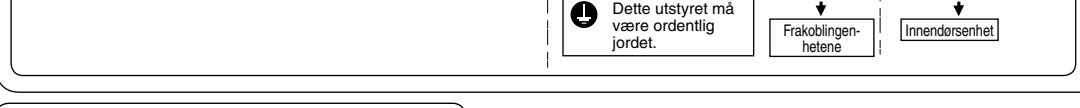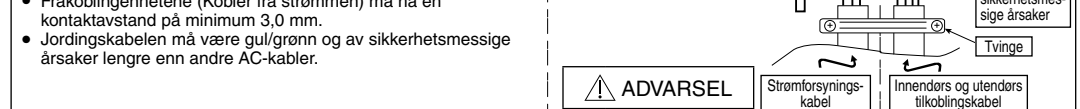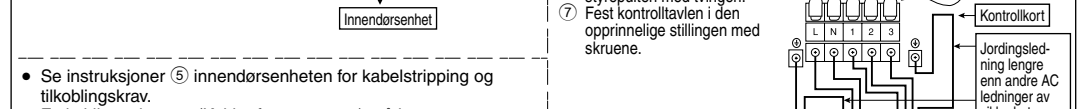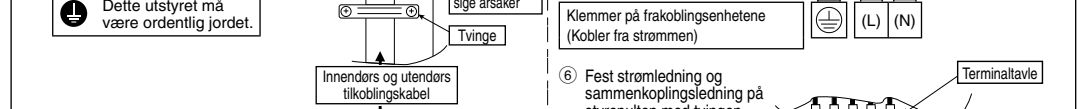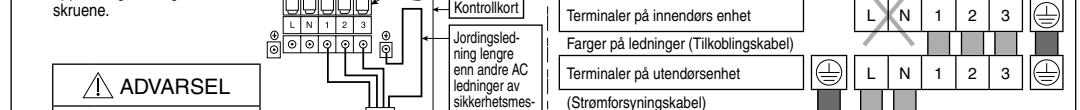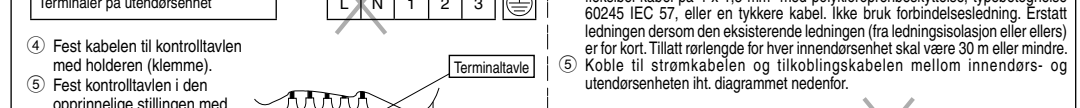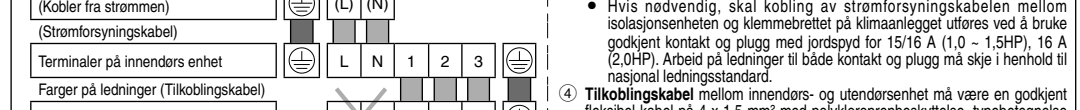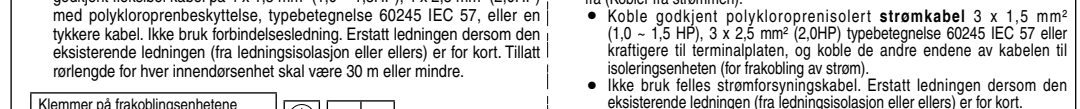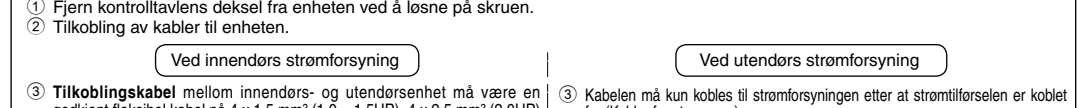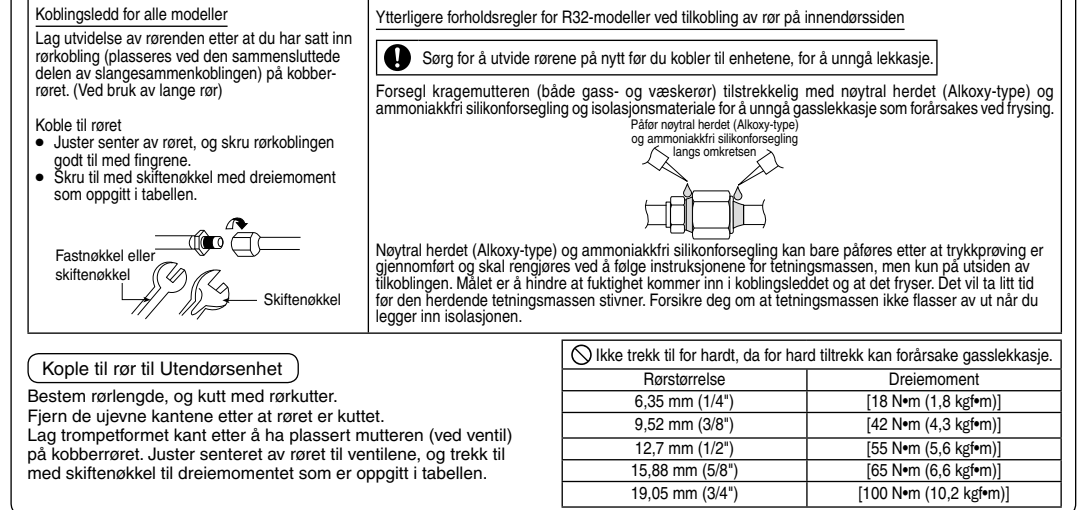


- DANSK**
ACXF60-47000 (2/2)
TRYKT I MALAYSIA

Sisäyksikön

1 VALITSE PARAS SIJAINTI (Kts. kohta "Valitse paras sijainti")

2 KUINKA KIINNITTÄÄ ASENNUSALUSTA

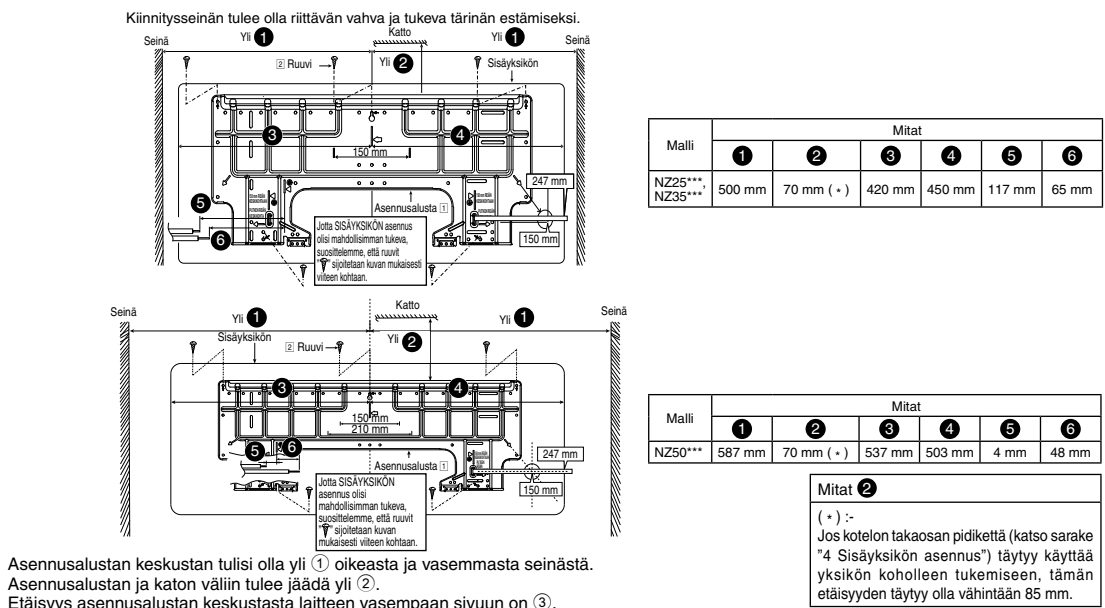


Asennusalan keskustan tulisi olla yllä 1 oikeasta ja vasemmasta seinästä. Asennusalan ja katon välin tulee jäädä yli 2). Etäisyys asennusalan keskustasta laitteen vasempaan sivuun on 3). Etäisyys asennusalan keskustasta laitteen oikeaan sivuun on 4). Vasemmanpuolisen putkien asennus, nesteputkien tulisi olla noin 5) päässä tästä viivasta. Asennusalan seinään vähintään viittä ruuvia käyttäen (vähintään 5 ruuvia). (Asentaessasi laitteen betoniseinään, kiinnityspulttien käyttö saattaa olla tarpeen.) Sijoita aina asennuslata vaakaasuoran asentoon, sijoittamalla merkkasuvi ja lanka yhdensuuntaisesti ja vesivaakaa käyttäen. Poraa putkiauko alustaan 70 mm porauskoneella käyttäen. Asenna noudattaen asennusalan vasenta ja oikeaa reunaa noudattaen. Reiän keskikohta sijaitsee jatkuvan viivan kohdalla asennusalan vasenta ja oikea reunaa noudattaen. Toimen tapa on sijoittaa mittausreppä yllä olevan kuvan osoittamaan paikkaan. Reiän keskikohta saadaan mittaamalla välimatka 150 mm oikeasta reistä (NZ25***, NZ35*** tai 210 mm vasemmasta ja 150 mm oikeasta reistä (NZ250***). Poraa putkireiä joko oikealle tai vasemmalle. Reiän tulisi olla hieman kallellaan ulospäin.

3 REIÄN PORAAMINEN SEINÄÄN JA PUTKIHOLKIN ASENTAMINEN

1. Laita holkki reikään.
2. Kiinnitä läpivieritearin holkkiin.
3. Leikkaa holkki niin, että ulosajaja osa on noin 15 mm seinästä.

VAROITUS! Seinän ollessa ontto varmista että putkikokoanporan asentamisen yhteydessä käytetään holkkia. Näin estät hiiriä jyrmistä johtoja.

4. Viimeistelet käyttäen kittiä tai muuta vastaavaa tiivistystä niin, että liitoksesta tulee tiivis.

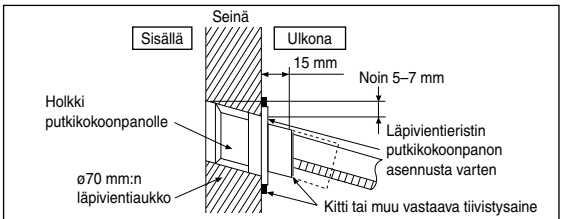

5 LIITÄ JOHTO SISÄLAITTEESEEN

1. Ulko- ja sisälaitteiden johtoja voidaan liittää poistamatta eturitilää.
2. Valitse käytettävä virransyöttötila, sisävirransyöttö tai ulkoverransyöttö.

Virransyöttö sisätiloissa

3. Asenna sisäyksikkö asennuspidikkeeseen, joka on kiinnitetty seinään.
4. Avaa etupaneeli ja eturitiä irrottamalla ruuvi.
5. Kaapeliliitäntä virransyöttöön eristyslaitteen kautta (Päävirran katkaisu).

- Liitä hyväksytyn tyyppien polykloropreenipäälysteinen virtajohto 3 x 1,5 mm² (1,0 - 1,5 HP), 3 x 2,5 mm² (2,0 HP), tyypinmääritys 60245 IEC 57 tai paksumpi, liittäminen ja kytkä johdon toinen pää eristyslaitteen (eristysyksikön).
- Älä käytä yhdistettyä virtalaitteen johtoa. Vain johto, jos nykyinen johto (piilokaapeloinnissa tai muualla) on liian lyhyt.
- Jos sitä ei voida välttää, virtalaitteen johdon yhdistämisen eristyslaitteen ja imastoililaitteen liittäminen välillä on tehtävä käyttäen hyväksyttyä pistotulppaa ja maadoitettua pistotulppaa, jonka lukitus on 15/16 A (1,0 - 1,5 HP), 16 A (2,0 HP). Sekä pistotulppien että pistotulppien johtojen liittäminen on noudatettava kansallisia kaapelointistandardeja.

6. Sido kaikki virtalaitteen johdot teipillä ja vie johto vasemman johdotuksen läpi.
7. Ulko- ja sisälaitteiden välisen liitosjohdon tulisi olla hyväksyttyä polykloropreenipäälysteistä 4 x 1,5 mm² (1,0 - 1,5 HP), 4 x 2,5 mm² (2,0 HP) taipuisaa johtoa, tyypinmääritys 60245 IEC 57 tai paksumpi. Älä käytä yhdistettyä liitäntäjohtoa. Vain johto, jos nykyinen johto (piilokaapeloinnissa tai muualla) on liian lyhyt. Kunkin sisäyksikön suurin mahdollinen liitäntäjohtojen pituus on 30 metriä tai vähemmän.
8. Sido sisä- ja ulkoyksikön väliset liitäntäjohtot yhteen teipillä ja työnä liitäntäjohto johdotuksen läpi.

9. Poista teippi ja liitä virtajohto ja liitäntäjohto sisä- ja ulkoyksikön välillä kaapelointistandardilla tavalla.

Ulkolaitteen liittimet
Johtojen värit (Liitäntäjohto)
Sisälaitteen liittimet
(Virtajohto)
Eristyslaitteen liittimet (eristysyksiköksi)

Suosituspituus (mm)
Suosituspituus (mm)
Suosituspituus (mm)

Käytä kokonaisia johtoja yhdistämällä niitä.
Käytä hyväksyttyä pistotulppaa ja maadoitettua pistotulppaa.
Johtojen liittäminen on tällä alueella noudatettava kansallisia kaapelointistandardeja.

VAARA
Tämä laitteisto on maadoitettava kunnolla.

JOHTOJEN KUORIMINEN, LIITÄNTÄVAATIMUKSET
Johtojen kuoriminen
Sisälaitteen liittimet
Ulkolaitteen liittimet
Eristyslaitteen liittimet (eristysyksiköksi)

Käytä kittiä tai muuta vastaavaa ainetta eristääksesi seinäaukko.
Käytä kittiä tai muuta vastaavaa ainetta eristääksesi seinäaukko.

VAARA
Tämä laitteisto on maadoitettava kunnolla.


VAARA
Tämä laitteisto on maadoitettava kunnolla.

VAARA
Tämä laitteisto on maadoitettava kunnolla.

VAARA
Tämä laitteisto on maadoitettava kunnolla.

VAARA
Tämä laitteisto on maadoitettava kunnolla.

4 SISÄLAITTEEN ASENNUS

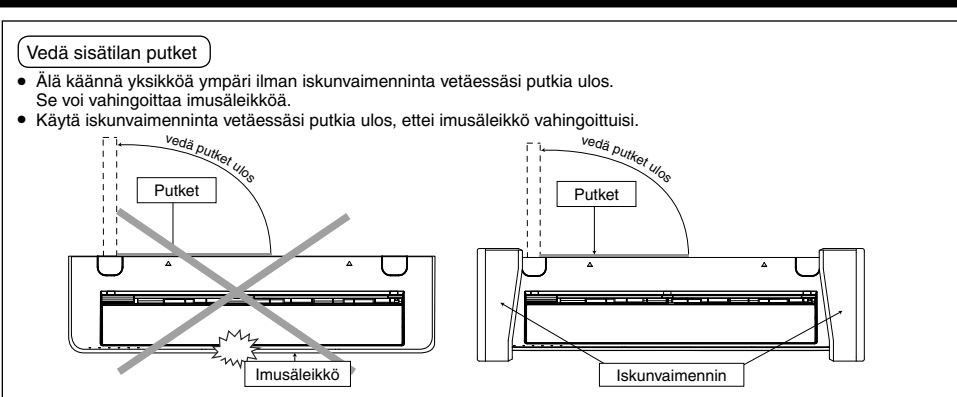

1. OIKEAA TAKAPUTKEA VARTEN

Vaihe 1 Vedä sisätilan putket

Vaihe 2 Asenna sisälaitte

Vaihe 3 Kiinnitä sisälaitte

Vaihe 4 Aseta liitosjohto

Vaihe 5 Asenna sisälaitte

Vaihe 6 Kiinnitä sisälaitte

Vaihe 7 Aseta liitosjohto

Vaihe 8 Kiinnitä sisälaitte

Vaihe 9 Asenna sisälaitte

Vaihe 10 Kiinnitä sisälaitte

Vaihe 11 Aseta liitosjohto

Vaihe 12 Kiinnitä sisälaitte

Vaihe 13 Asenna sisälaitte

Vaihe 14 Kiinnitä sisälaitte

Vaihe 15 Asenna sisälaitte

Vaihe 16 Kiinnitä sisälaitte

Vaihe 17 Asenna sisälaitte

Vaihe 18 Kiinnitä sisälaitte

Vaihe 19 Asenna sisälaitte

Vaihe 20 Kiinnitä sisälaitte

Vaihe 21 Asenna sisälaitte

Vaihe 22 Kiinnitä sisälaitte

Vaihe 23 Asenna sisälaitte

Vaihe 24 Kiinnitä sisälaitte

Vaihe 25 Asenna sisälaitte

Vaihe 26 Kiinnitä sisälaitte

Vaihe 27 Asenna sisälaitte

Vaihe 28 Kiinnitä sisälaitte

Vaihe 29 Asenna sisälaitte

Vaihe 30 Kiinnitä sisälaitte

Vaihe 31 Asenna sisälaitte

Vaihe 32 Kiinnitä sisälaitte

Vaihe 33 Asenna sisälaitte

Vaihe 34 Kiinnitä sisälaitte

Vaihe 35 Asenna sisälaitte

Vaihe 36 Kiinnitä sisälaitte

Vaihe 37 Asenna sisälaitte

Vaihe 38 Kiinnitä sisälaitte

Vaihe 39 Asenna sisälaitte

Vaihe 40 Kiinnitä sisälaitte

Vaihe 41 Asenna sisälaitte

Vaihe 42 Kiinnitä sisälaitte

Vaihe 43 Asenna sisälaitte

Vaihe 44 Kiinnitä sisälaitte

Vaihe 45 Asenna sisälaitte

Vaihe 46 Kiinnitä sisälaitte

Vaihe 47 Asenna sisälaitte

Vaihe 48 Kiinnitä sisälaitte

Vaihe 49 Asenna sisälaitte

Vaihe 50 Kiinnitä sisälaitte

Vaihe 51 Asenna sisälaitte

Vaihe 52 Kiinnitä sisälaitte

Vaihe 53 Asenna sisälaitte

Vaihe 54 Kiinnitä sisälaitte

Vaihe 55 Asenna sisälaitte

Vaihe 56 Kiinnitä sisälaitte

Vaihe 57 Asenna sisälaitte

Vaihe 58 Kiinnitä sisälaitte

Vaihe 59 Asenna sisälaitte

Vaihe 60 Kiinnitä sisälaitte

Vaihe 61 Asenna sisälaitte

Vaihe 62 Kiinnitä sisälaitte

Vaihe 63 Asenna sisälaitte

Vaihe 64 Kiinnitä sisälaitte

Vaihe 65 Asenna sisälaitte

Vaihe 66 Kiinnitä sisälaitte

Vaihe 67 Asenna sisälaitte

Vaihe 68 Kiinnitä sisälaitte

Vaihe 69 Asenna sisälaitte

Vaihe 70 Kiinnitä sisälaitte

Vaihe 71 Asenna sisälaitte

Vaihe 72 Kiinnitä sisälaitte

Vaihe 73 Asenna sisälaitte

Vaihe 74 Kiinnitä sisälaitte

Vaihe 75 Asenna sisälaitte

Vaihe 76 Kiinnitä sisälaitte

Vaihe 77 Asenna sisälaitte

Vaihe 78 Kiinnitä sisälaitte

Vaihe 79 Asenna sisälaitte

Vaihe 80 Kiinnitä sisälaitte

Vaihe 81 Asenna sisälaitte

Vaihe 82 Kiinnitä sisälaitte

Vaihe 83 Asenna sisälaitte

Vaihe 84 Kiinnitä sisälaitte

Vaihe 85 Asenna sisälaitte

Vaihe 86 Kiinnitä sisälaitte

Vaihe 87 Asenna sisälaitte

Vaihe 88 Kiinnitä sisälaitte

Vaihe 89 Asenna sisälaitte

Vaihe 90 Kiinnitä sisälaitte

Vaihe 91 Asenna sisälaitte

Vaihe 92 Kiinnitä sisälaitte

Vaihe 93 Asenna sisälaitte

Vaihe 94 Kiinnitä sisälaitte

Vaihe 95 Asenna sisälaitte

Vaihe 96 Kiinnitä sisälaitte

Vaihe 97 Asenna sisälaitte

Vaihe 98 Kiinnitä sisälaitte

Vaihe 99 Asenna sisälaitte

Vaihe 100 Kiinnitä sisälaitte

Vaihe 101 Asenna sisälaitte

Vaihe 102 Kiinnitä sisälaitte

Vaihe 103 Asenna sisälaitte

Vaihe 104 Kiinnitä sisälaitte

Vaihe 105 Asenna sisälaitte

Vaihe 106 Kiinnitä sisälaitte

Vaihe 107 Asenna sisälaitte

Vaihe 108 Kiinnitä sisälaitte

Vaihe 109 Asenna sisälaitte

Vaihe 110 Kiinnitä sisälaitte

Vaihe 111 Asenna sisälaitte

Vaihe 112 Kiinnitä sisälaitte

Vaihe 113 Asenna sisälaitte

Vaihe 114 Kiinnitä sisälaitte

Vaihe 115 Asenna sisälaitte

Vaihe 116 Kiinnitä sisälaitte

Vaihe 117 Asenna sisälaitte

Vaihe 118 Kiinnitä sisälaitte

Vaihe 119 Asenna sisälaitte

Vaihe 120 Kiinnitä sisälaitte

Vaihe 121 Asenna sisälaitte

Vaihe 122 Kiinnitä sisälaitte

Vaihe 123 Asenna sisälaitte

Vaihe 124 Kiinnitä sisälaitte

Vaihe 125 Asenna sisälaitte

Vaihe 126 Kiinnitä sisälaitte

Vaihe 127 Asenna sisälaitte

Vaihe 128 Kiinnitä sisälaitte

Vaihe 129 Asenna sisälaitte

Vaihe 130 Kiinnitä sisälaitte

Vaihe 131 Asenna sisälaitte

Vaihe 132 Kiinnitä sisälaitte

Vaihe 133 Asenna sisälaitte

Vaihe 134 Kiinnitä sisälaitte

Vaihe 135 Asenna sisälaitte

Vaihe 136 Kiinnitä sisälaitte

Vaihe 137 Asenna sisälaitte

Vaihe 138 Kiinnitä sisälaitte

Vaihe 139 Asenna sisälaitte

Vaihe 140 Kiinnitä sisälaitte

Vaihe 141 Asenna sisälaitte

Vaihe 142 Kiinnitä sisälaitte

Vaihe 143 Asenna sisälaitte

Vaihe 144 Kiinnitä sisälaitte

Vaihe 145 Asenna sisälaitte

Vaihe 146 Kiinnitä sisälaitte

Vaihe 147 Asenna sisälaitte

Vaihe 148 Kiinnitä sisälaitte

Vaihe 149 Asenna sisälaitte

Vaihe 150 Kiinnitä sisälaitte

Vaihe 151 Asenna sisälaitte

Vaihe 152 Kiinnitä sisälaitte

Vaihe 153 Asenna sisälaitte

Vaihe 154 Kiinnitä sisälaitte

Vaihe 155 Asenna sisälaitte

Vaihe 156 Kiinnitä sisälaitte

Vaihe 157 Asenna sisälaitte

Vaihe 158 Kiinnitä sisälaitte

Vaihe 159 Asenna sisälaitte

Vaihe 160 Kiinnitä sisälaitte

Vaihe 161 Asenna sisälaitte

Vaihe 162 Kiinnitä sisälaitte

Vaihe 163 Asenna sisälaitte

Vaihe 164 Kiinnitä sisälaitte

Vaihe 165 Asenna sisälaitte

Vaihe 166 Kiinnitä sisälaitte

Vaihe 167 Asenna sisälaitte

Vaihe 168 Kiinnitä sisälaitte

Vaihe 169 Asenna sisälaitte

Vaihe 170 Kiinnitä sisälaitte

Vaihe 171 Asenna sisälaitte

Vaihe 172 Kiinnitä sisälaitte

Vaihe 173 Asenna